

Rotorcase Cover Jackets - SRU Pump Models			
Pump Model	Description	Qty	Part No.
SRU1	Rotorcase cover drilled for jacket	1	9630027764
	Jacket - standard (for ATEX pump see 'ATEX Parts')	1	9630031941
	Screw	4	9630024603
SRU2	Rotorcase cover drilled for jacket	1	9630027767
	Jacket - standard (for ATEX pump see 'ATEX Parts')	1	9630031943
	Screw	4	9630024603
SRU3	Rotorcase cover drilled for jacket	1	9630027766
	Jacket - standard (for ATEX pump see 'ATEX Parts')	1	9630031945
	Screw	4	9630024603
SRU4	Rotorcase cover drilled for jacket	1	9630030268
	Jacket - standard (for ATEX pump see 'ATEX Parts')	1	9630031947
	Screw	4	9630032120
SRU5	Rotorcase cover drilled for jacket	1	9630027765
	Jacket - standard (for ATEX pump see 'ATEX Parts')	1	9630031949
	Screw	4	9630032120
SRU6	Rotorcase cover drilled for jacket	1	9630027763
	Jacket - standard (for ATEX pump see 'ATEX Parts')	1	9630031951
	Screw	4	9630031826

Rotorcase Saddles - SRU Pump Models			
Pump Model	Description	Qty	Part No.
SRU1	Rotorcase drilled for saddle	1	See Pages 31-33
	Saddle - standard (for ATEX pump see 'ATEX Parts')	2	9630032345
	Screw	4	9630018807
SRU2	Rotorcase drilled for saddle	1	See Pages 31-33
	Saddle - standard (for ATEX pump see 'ATEX Parts')	2	9630032347
	Screw	4	9630024603
SRU3	Rotorcase drilled for saddle	1	See Pages 31-33
	Saddle - standard (for ATEX pump see 'ATEX Parts')	2	9630031953
	Screw	4	9630024598
SRU4	Rotorcase drilled for saddle	1	See Pages 31-33
	Saddle - standard (for ATEX pump see 'ATEX Parts')	2	9630031955
	Screw	4	9630031826
SRU5	Rotorcase drilled for saddle	1	See Pages 31-33
	Saddle - standard (for ATEX pump see 'ATEX Parts')	2	9630031957
	Screw	4	9630024599
SRU6	Rotorcase drilled for saddle	1	See Pages 31-33
	Saddle - standard (for ATEX pump see 'ATEX Parts')	2	9630031959
	Screw	4	9630024599

Jackets and Saddles - Exploded View Drawing

