



Mounting Instruction

IndiTop



RODEM
PROCESS EQUIPMENT
www.rodem.com 800-543-7312

ESE00163EN 2006-06
9611-99-4624
Alfa Laval Kolding A/S, www.alfalaval.com

1. Mounting Instructions

Fix the magnet on top of the actuator




2. Mounting Instructions

Fit **IndiTop** over the magnet and the "mushrooms" - front opposite air fitting



3. Mounting Instructions

Carefully fix **IndiTop** with the two allen screws (max. torque 2,5 Nm), while pressing down.

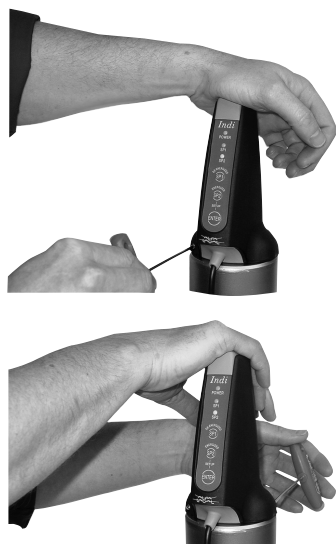

4. Mounting Instructions

Connect wires as below:

Red: +/L1 (≈), 8-30V DC/AC
Black: -/N (≈)
Green: SP1 (De-energized)
Yellow: SP2 (Energized)
Brown: PNP (+ or L1)/NPN (- or N)
Orange: Remote setup bit (If not used, connect to +/L1)


Note:

Switch between PNP/NPN by connecting the brown wire to either +/L1 (PNP) or -/N (NPN)

Plug Version:

Pin connections

1: -/N (≈)
2: SP2 (Energized)
3: SP1 (De-energized)
4: +/L1 (≈), 8-30V DC/AC
5: Remote setup bit (if not used, connect to +/L1 (pin4))

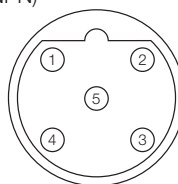

1. Setting up **IndiTop** (push button)


To enter SETUP press and hold "SP2" + "Enter" until the blue LED starts to flash (3 seconds)



2. Setting up **IndiTop** (push button)

Clear previous saved positions by pressing "Enter" until all the LED's have turned ON in a sequence (blue-green-yellow) and flashed once (3 seconds)

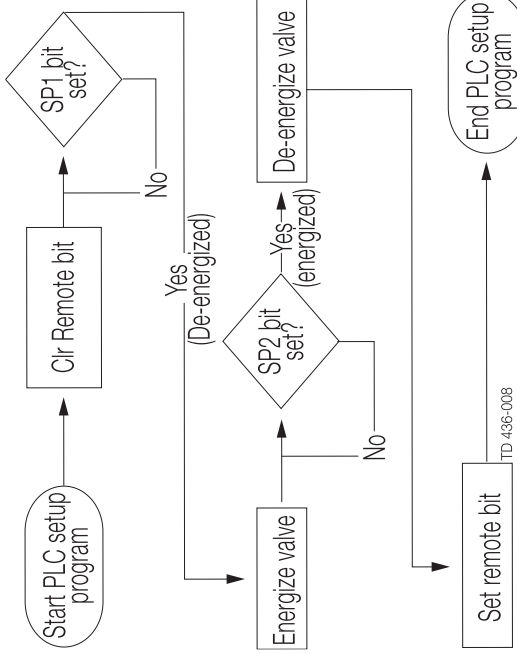

3. Setting up <i>IndiTop</i> (push button) De-energize the valve and save the 1st Set Point "SP1" (de-energized) by pressing the "SP1" button until "SP1" LED becomes steady ON (3 seconds) Set point 1 (SP1) is intended to be the return position of the valve in case of a power breakdown, i.e. de-energized. 	4. Setting up <i>IndiTop</i> (push button) Energize the valve and save the 2nd Set Point "SP2" (energized) by pressing the "SP2" button until "SP2" LED becomes steady ON (3 seconds) Set point 2 (SP2) is intended to be the opposite of SP1, i.e. energized. 	Technical Data Protection Class IP66/67 Power Supply IndiTop is designed to be a part of the PLC's Input/Output (I/O) system. It should be supplied from the same protected power supply as the other I/O devices. The unit is reverse polarity and short circuit protected. The power supply must meet the requirements of EN 61131-2. Supply voltage:8 - 30 V DC/AC Supply voltage nominal:24 V DC/AC (RMS) (-15%/+20% as per EN 61131-2:2003) Max. ripple:5% of nominal supply voltage Supply voltage absolute max:30 V DC/AC Supply voltage absolute min.:8 V DC/AC Supply current*):Max. 45 mA *) The initial current during power-on is higher. The actual shape of the current pulse depends on the power supply used. Typical values are 150mA RMS during 13 ms (regulated PS) to 360 mA RMS during 8 ms (unregulated PS). The fulfilling of the UL requirements in UL508 requires that the unit is supplied by an isolating source complying with the requirements for class 2 power units (UL1310) or class 2 and 3 transformers (UL1585). Feedback Signals Output signals from the sensor unit to the connected digital interface (PLC). Nominal voltage: Same as supply voltage. Load current: 50 mA typically, 100 mA max. Voltage drop: Typically 3 V at 100 mA
5. Setting up <i>IndiTop</i> (push button) To exit SETUP press and hold "SP2" + "Enter" until the blue LED becomes steady (3 seconds) 	6. Setting up <i>IndiTop</i> (push button) Verify the saved positions by energizing/de-energizing the valve and see if the correct LED is lit (SP1 = de-energized, SP2 = energized)	7. Setting up <i>IndiTop</i> (Remote) The sequence in the flow chart shown must be followed in the programming to do a successful remote setup. Note 1 The remote setup can be done in two ways: Either by a simple PLC program or by manual bit (tag) control. In both cases, the flow chart must be followed to ensure the right feedback. Note 2 The "Remote Setup Bit" must always be connected to +/L1 if the remote setup feature is not used.  TD 436-008