





Spare Parts

Unique 7000 Series - Tangential body/Tank valve

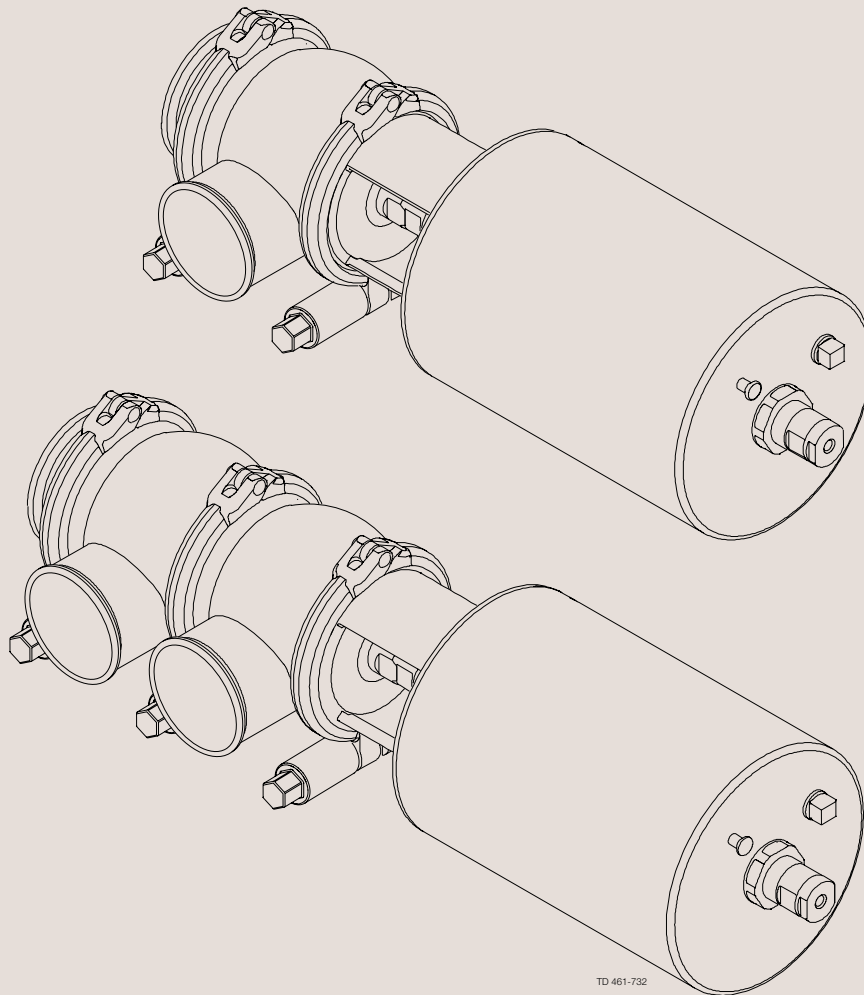


ESE00591ENUS1 2007-09

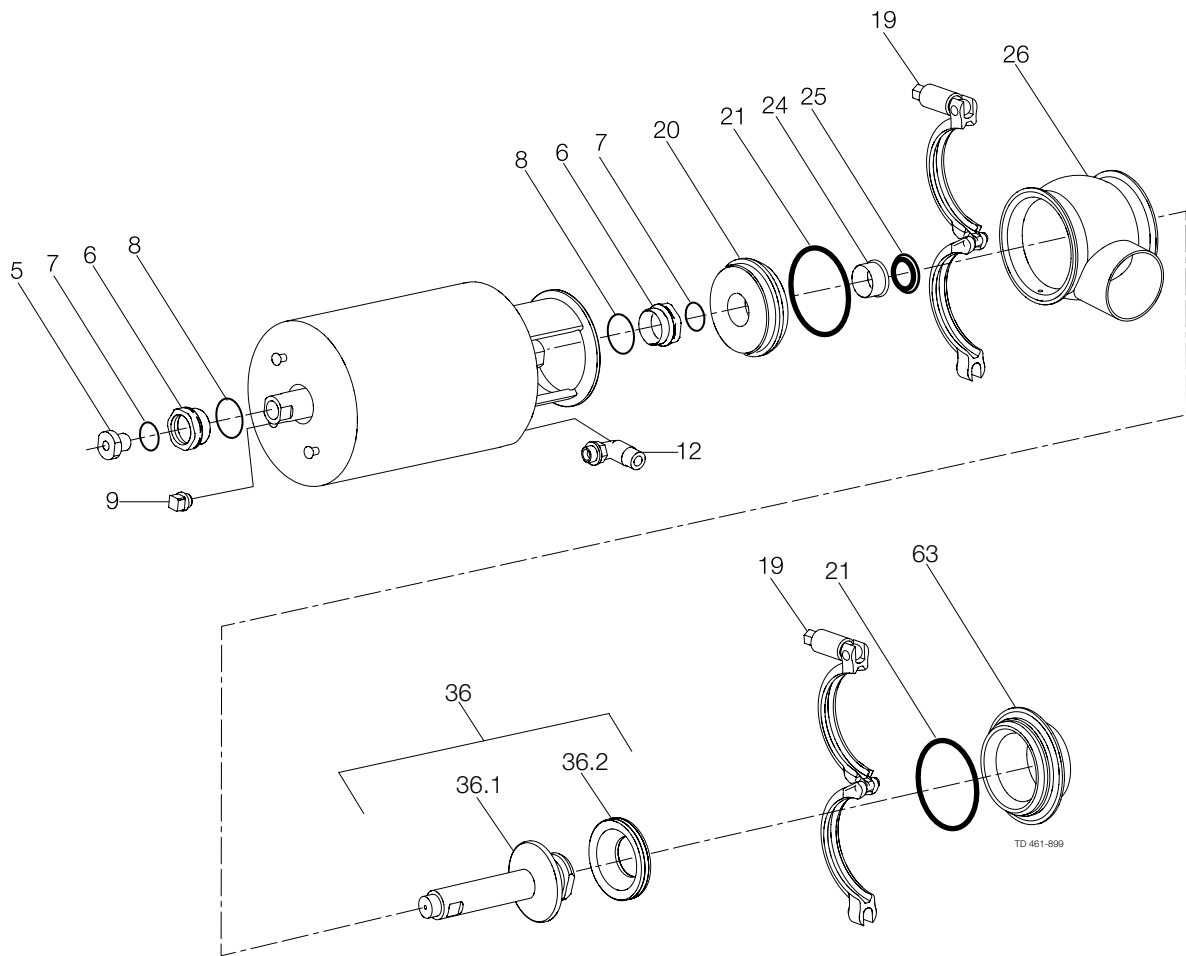

Pos.	Qty	Denomination	2"	2½"	3"	4"
Actuator						
		Actuator, complete (NO)	9613-1548-32	9613-1548-33	9613-1548-34	9613-1548-35
		Actuator, complete (NC)	9613-1548-37	9613-1548-38	9613-1548-39	9613-1548-40
		Actuator, complete (A/A)	9613-1548-42	9613-1548-43	9613-1548-44	9613-1548-45
5	1	Adapter	9613-1274-01	9613-1274-01	9613-1274-01	9613-1274-01
6	□ 2	Bushing				
7	□ 2	O-ring				
8	□ 2	O-ring				
9	1	Plug	9613-4141-01	9613-4141-01	9613-4141-01	9613-4141-01
12	1(2)	Air fitting	9611-99-4682	9611-99-4682	9611-99-4682	9611-99-4682
Clamp						
19	2	Clamp	9612-9393-23	9612-9393-24	9612-9393-25	9612-9393-26
Bonnet						
20	1	Bonnet	9613-1271-03	9613-1271-04	9613-1271-05	9613-1271-06
21	◆ 2	O-ring, EPDM (standard)				
	2	O-ring, HNBR				
	2	O-ring, FPM				
24	1	Bushing	9613-1250-02	9613-1250-02	9613-1250-02	9613-1250-02
25	◆ 1	Lip seal, EPDM (standard)				
	1	Lip seal, HNBR				
	1	Lip seal, FPM				
Valve Body						
26	1	Valve body, 1 port , clamp	9613-1690-02	9613-1690-04	9613-1690-06	9613-1690-08
	1	Valve body, 2 ports, clamp	9613-1690-18	9613-1690-20	9613-1690-22	9613-1690-24
	1	Valve body, 1 port, welding ends	9613-4448-09	9613-4448-11	9613-4448-13	9613-4448-15
	1	Valve body, 2 ports, welding ends	9613-4448-10	9613-4448-12	9613-4448-14	9613-4448-16
63	1	Port seal element, clamp	9634-0706-01	9634-0707-01	9634-0708-01	9634-0709-01
	1	Port seal element, welding ends	9634-0711-01	9634-0712-01	9634-0713-01	9634-0714-01
Valve Plug						
36	1	Plug, shut off, complete	9613-1558-03	9613-1558-04	9613-1558-05	9613-1558-06
36.1	1	Plug, shut off,	9613-1511-02	9613-1511-03	9613-1511-04	9613-1511-05
36.2	◆ 1	Plug seal, PTFE				
Recommended spare parts: Service kits.						
	□	Service kit, actuator	9611-92-6500	9611-92-6500	9611-92-6500	9611-92-6500
	◆	Service kit, EPDM	9611-92-6767	9611-92-6768	9611-92-6769	9611-92-6770
	◆	Service kit, HNBR	9611-92-6771	9611-92-6772	9611-92-6773	9611-92-6774
	◆	Service kit, FPM	9611-92-6775	9611-92-6776	9611-92-6777	9611-92-6778

Parts marked with □ are included in the service kits (actuator)
 Parts marked with ◆ are included in the service kits (product wetted parts)

TD 900-488

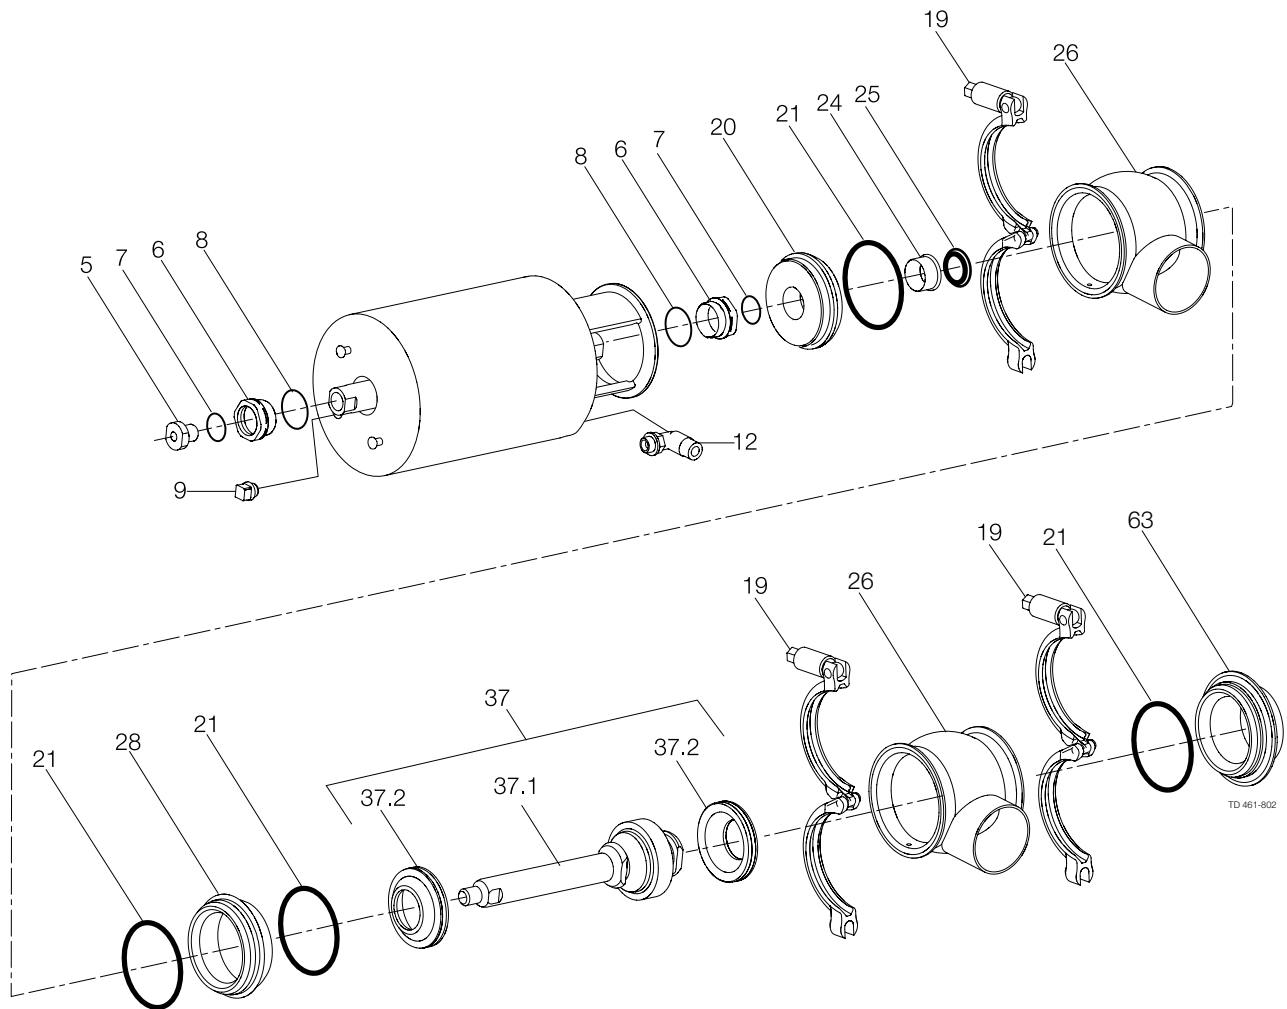


Pos.	Qty	Denomination	2"	2½"	3"	4"
Actuator						
		Actuator, complete (NO)	9613-1548-32	9613-1548-33	9613-1548-34	9613-1548-35
		Actuator, complete (NC)	9613-1548-37	9613-1548-38	9613-1548-39	9613-1548-40
		Actuator, complete (A/A)	9613-1548-42	9613-1548-43	9613-1548-44	9613-1548-45
5	1	Adapter	9613-1274-01	9613-1274-01	9613-1274-01	9613-1274-01
6	□ 2	Bushing.....				
7	□ 2	O-ring				
8	□ 2	O-ring				
9	1	Plug	9613-4141-01	9613-4141-01	9613-4141-01	9613-4141-01
12	1(2)	Air fitting.....	9611-99-4682	9611-99-4682	9611-99-4682	9611-99-4682
Clamp						
19	3	Clamp	9612-9393-23	9612-9393-24	9612-9393-25	9612-9393-26
Bonnet						
20	1	Bonnet	9613-1271-03	9613-1271-04	9613-1271-05	9613-1271-06
21	◆ 4	O-ring, EPDM (standard)				
	4	O-ring, HNBR.....				
	4	O-ring, FPM				
24	1	Bushing	9613-1250-02	9613-1250-02	9613-1250-02	9613-1250-02
25	◆ 1	Lip seal, EPDM (standard)				
	1	Lip seal, HNBR.....				
	1	Lip seal, FPM				
Seat						
28	1	Seat	9613-1275-03	9613-1275-04	9613-1275-05	9613-1275-06
Valve Body						
26	2	Valve body, 1 port , clamp	9613-1690-02	9613-1690-04	9613-1690-06	9613-1690-08
	2	Valve body, 2 ports, clamp	9613-1690-18	9613-1690-20	9613-1690-22	9613-1690-24
	2	Valve body, 1 port, welding ends	9613-4448-09	9613-4448-11	9613-4448-13	9613-4448-15
	2	Valve body, 2 ports, welding ends	9613-4448-10	9613-4448-12	9613-4448-14	9613-4448-16
63	1	Port seal element, clamp.....	9634-0706-01	9634-0707-01	9634-0708-01	9634-0709-01
	1	Port seal element, welding ends.....	9634-0711-01	9634-0712-01	9634-0713-01	9634-0714-01
Valve Plug						
37	1	Plug, change over, complete	9613-1555-03	9613-1555-04	9613-1555-05	9613-1555-06
37.1	1	Plug, change over	9613-1554-02	9613-1554-03	9613-1554-04	9613-1554-05
37.2	◆ 2	Plug seal, PTFE.....				
Recommended spare parts: Service kits						
	□	Service kit, actuator	9611-92-6500	9611-92-6500	9611-92-6500	9611-92-6500
	◆	Service kit, EPDM	9611-92-6779	9611-92-6780	9611-92-6781	9611-92-6782
	◆	Service kit, HNBR.....	9611-92-6783	9611-92-6784	9611-92-6785	9611-92-6786
	◆	Service kit, FPM	9611-92-6787	9611-92-6788	9611-92-6789	9611-92-6790

Parts marked with □ are included in the service kits (actuator)
Parts marked with ◆ are included in the service kits (product wetted parts)

Unique 7000 Series - Tangential body
Elastomer plug seal - Shut-off Valve


Drawing

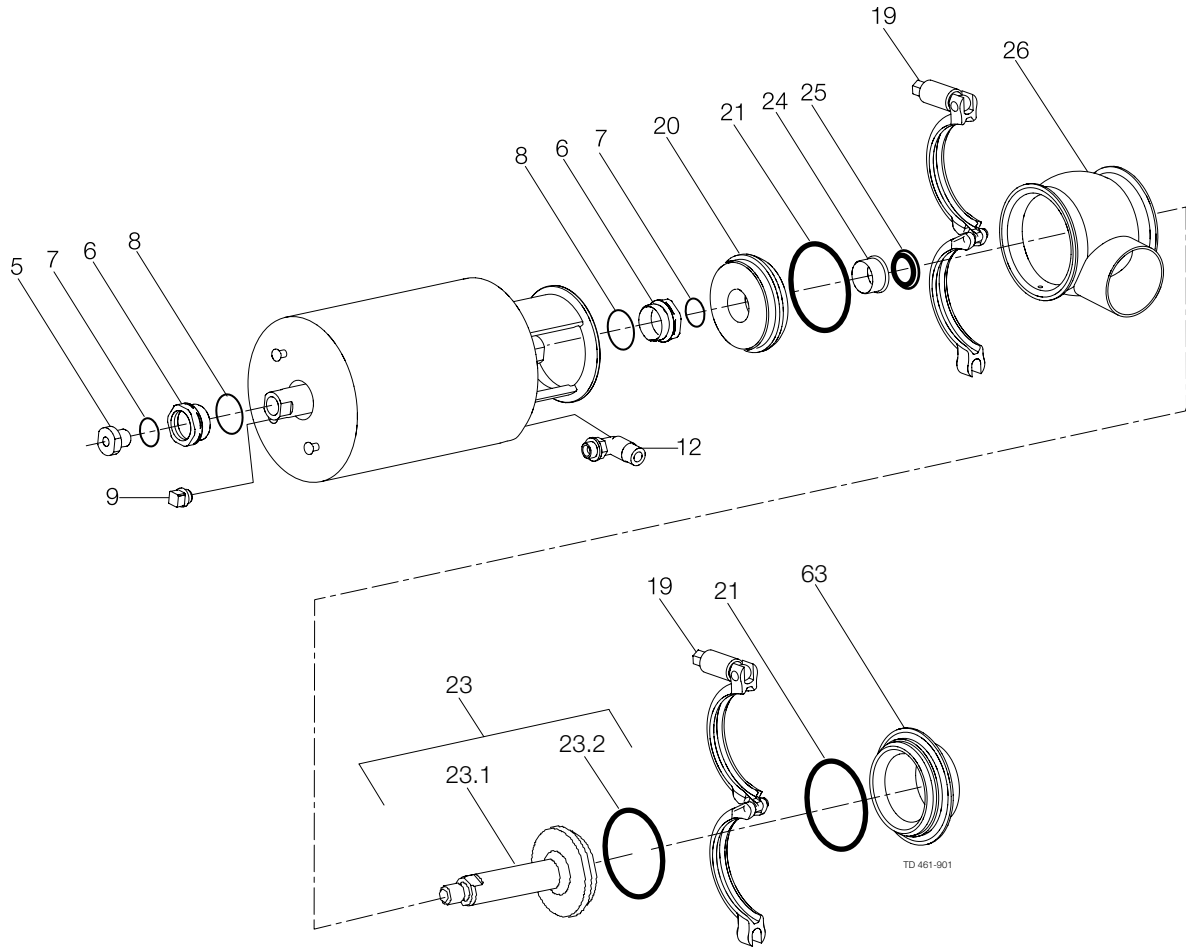

Pos.	Qty	Denomination	2"	2½"	3"	4"
Actuator						
		Actuator, complete (NO)	9613-1548-32	9613-1548-33	9613-1548-34	9613-1548-35
		Actuator, complete (NC)	9613-1548-37	9613-1548-38	9613-1548-39	9613-1548-40
		Actuator, complete (A/A)	9613-1548-42	9613-1548-43	9613-1548-44	9613-1548-45
5	1	Adapter	9613-1274-01	9613-1274-01	9613-1274-01	9613-1274-01
6	□ 2	Bushing				
7	□ 2	O-ring				
8	□ 2	O-ring				
9	1	Plug	9613-4141-01	9613-4141-01	9613-4141-01	9613-4141-01
12	1(2)	Air fitting	9611-99-4682	9611-99-4682	9611-99-4682	9611-99-4682
Clamp						
19	2	Clamp	9612-9393-23	9612-9393-24	9612-9393-25	9612-9393-26
Bonnet						
20	1	Bonnet	9613-1271-03	9613-1271-04	9613-1271-05	9613-1271-06
21	◆ 2	O-ring, EPDM (standard)				
	2	O-ring, HNBR				
	2	O-ring, FPM				
24	1	Bushing	9613-1250-02	9613-1250-02	9613-1250-02	9613-1250-02
25	◆ 1	Lip seal, EPDM (standard)				
	1	Lip seal, HNBR				
	1	Lip seal, FPM				
Valve Body						
26	1	Valve body, 1 port , clamp	9613-1690-02	9613-1690-04	9613-1690-06	9613-1690-08
	1	Valve body, 2 ports, clamp	9613-1690-18	9613-1690-20	9613-1690-22	9613-1690-24
	1	Valve body, 1 port, welding ends	9613-4448-09	9613-4448-11	9613-4448-13	9613-4448-15
	1	Valve body, 2 ports, welding ends	9613-4448-10	9613-4448-12	9613-4448-14	9613-4448-16
63	1	Port seal element, clamp	9634-0706-01	9634-0707-01	9634-0708-01	9634-0709-01
	1	Port seal element, welding ends	9634-0711-01	9634-0712-01	9634-0713-01	9634-0714-01
Valve Plug						
23	1	Plug, complete, EPDM (standard)	9613-1388-03	9613-1388-04	9613-1388-05	9613-1388-06
	1	Plug, complete, HNBR	9613-1388-15	9613-1388-16	9613-1388-17	9613-1388-18
	1	Plug, complete, FPM	9613-1388-27	9613-1388-28	9613-1388-29	9613-1388-30
23.1	1	Plug	9613-1398-03	9613-1398-04	9613-1398-05	9613-1398-06
23.2	◆ 1	Plug seal, EPDM (standard)				
	1	Plug seal, HNBR				
	1	Plug seal, FPM				
Recommended spare parts: Service kits						
	□	Service kit, actuator	9611-92-6500	9611-92-6500	9611-92-6500	9611-92-6500
	◆	Service kit, EPDM	9611-92-6743	9611-92-6744	9611-92-6745	9611-92-6746
	◆	Service kit, HNBR	9611-92-6747	9611-92-6748	9611-92-6749	9611-92-6750
	◆	Service kit, FPM	9611-92-6751	9611-92-6752	9611-92-6753	9611-92-6754

Parts marked with □ are included in the service kits (actuator)

Parts marked with ◆ are included in the service kits (product wetted parts)

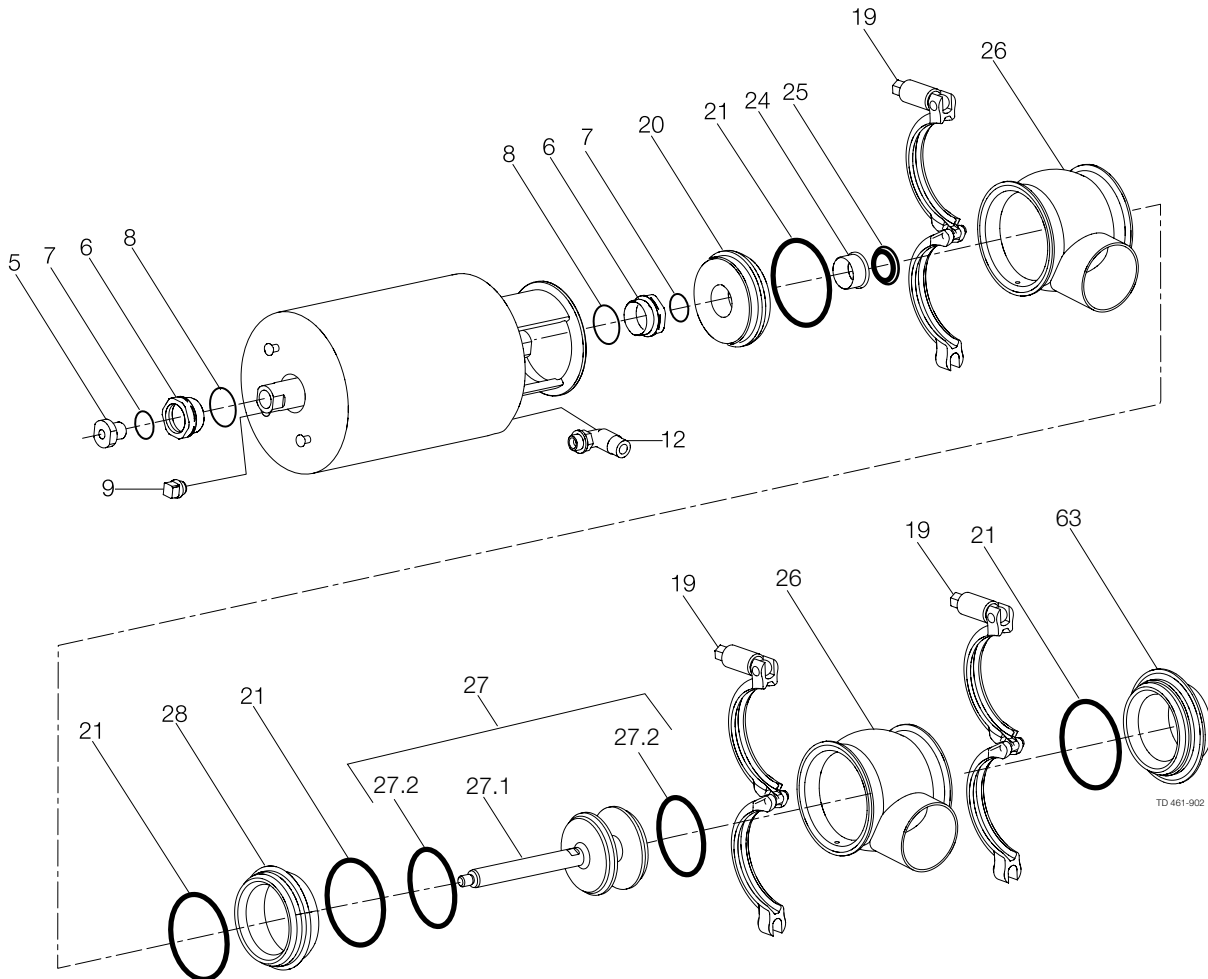

Pos.	Qty	Denomination	2"	2½"	3"	4"
Actuator						
		Actuator, complete (NO)	9613-1548-32	9613-1548-33	9613-1548-34	9613-1548-35
		Actuator, complete (NC)	9613-1548-37	9613-1548-38	9613-1548-39	9613-1548-40
		Actuator, complete (A/A)	9613-1548-42	9613-1548-43	9613-1548-44	9613-1548-45
5	1	Adapter	9613-1274-01	9613-1274-01	9613-1274-01	9613-1274-01
6	□ 2	Bushing				
7	□ 2	O-ring				
8	□ 2	O-ring				
9	1	Plug	9613-4141-01	9613-4141-01	9613-4141-01	9613-4141-01
12	1(2)	Air fitting	9611-99-4682	9611-99-4682	9611-99-4682	9611-99-4682
Clamp						
19	3	Clamp	9612-9393-23	9612-9393-24	9612-9393-25	9612-9393-26
Bonnet						
20	1	Bonnet	9613-1271-03	9613-1271-04	9613-1271-05	9613-1271-06
21	◆ 4	O-ring, EPDM (standard)				
	4	O-ring, HNBR				
	4	O-ring, FPM				
24	1	Bushing	9613-1250-02	9613-1250-02	9613-1250-02	9613-1250-02
25	◆ 1	Lip seal, EPDM (standard)				
	1	Lip seal, HNBR				
	1	Lip seal, FPM				
Seat						
28	1	Seat	9613-1275-03	9613-1275-04	9613-1275-05	9613-1275-06
Valve Body						
26	2	Valve body, 1 port , clamp	9613-1690-02	9613-1690-04	9613-1690-06	9613-1690-08
	2	Valve body, 2 ports, clamp	9613-1690-18	9613-1690-20	9613-1690-22	9613-1690-24
	2	Valve body, 1 port, welding ends	9613-4448-09	9613-4448-11	9613-4448-13	9613-4448-15
	2	Valve body, 2 ports, welding ends	9613-4448-10	9613-4448-12	9613-4448-14	9613-4448-16
63	1	Port seal element, clamp	9634-0706-01	9634-0707-01	9634-0708-01	9634-0709-01
	1	Port seal element, welding ends	9634-0711-01	9634-0712-01	9634-0713-01	9634-0714-01
Valve Plug						
27	1	Plug, ISO complete, EPDM (standard)	9613-1277-03	9613-1277-04	9613-1277-05	9613-1277-06
	1	Plug, ISO complete, HNBR	9613-1277-15	9613-1277-16	9613-1277-17	9613-1277-18
	1	Plug, ISO complete, FPM	9613-1277-27	9613-1277-28	9613-1277-29	9613-1277-30
27.1	1	Plug, ISO	9613-1400-03	9613-1400-04	9613-1400-05	9613-1400-06
27.2	◆ 2	Plug seal, EPDM (standard)				
	2	Plug seal, HNBR				
	2	Plug seal, FPM				
Recommended spare parts: Service kits.						
	□	Service kit, actuator	9611-92-6500	9611-92-6500	9611-92-6500	9611-92-6500
	◆	Service kit, EPDM	9611-92-6755	9611-92-6756	9611-92-6757	9611-92-6758
	◆	Service kit, HNBR	9611-92-6759	9611-92-6760	9611-92-6761	9611-92-6762
	◆	Service kit, FPM	9611-92-6763	9611-92-6764	9611-92-6765	9611-92-6766

Parts marked with □ are included in the service kits (actuator)

Parts marked with ◆ are included in the service kits (product wetted parts)

How to contact Alfa Laval

Contact details for all countries are continually updated on our website. Please visit www.alfalaval.com to access the information direct.