


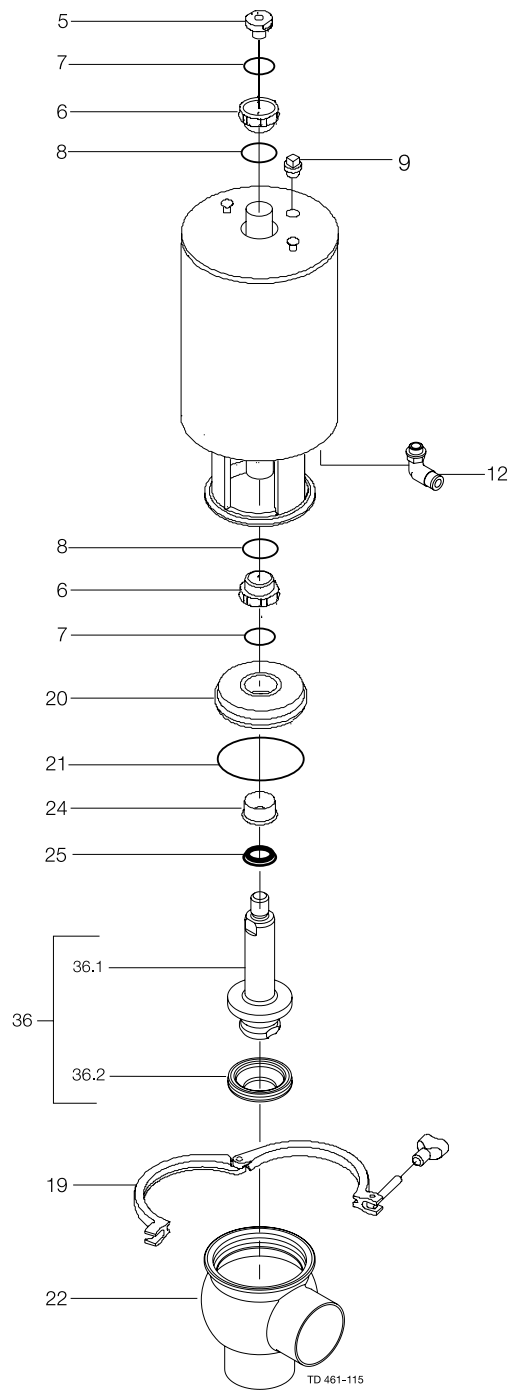

Pos.	Qty	Denomination	1"	1½"	2"
Actuator					
		Actuator, complete (NO)	9613-1548-31	9613-1548-31	9613-1548-32
		Actuator, complete (NC)	9613-1548-36	9613-1548-36	9613-1548-37
		Actuator, complete (A/A).....	9613-1548-41	9613-1548-41	9613-1548-42
	5	Adapter	9613-1274-01	9613-1274-01	9613-1274-01
☐	6	Bushing			
☐	7	O-ring			
☐	8	O-ring			
	9	Plug	9613-4141-01	9613-4141-01	9613-4141-01
	12	1(2) Air fitting	9611-99-4682	9611-99-4682	9611-99-4682
Clamp					
	19	1 Clamp	9612-9393-16	9612-9393-16	9612-9393-17
Bonnet					
	20	1 Bonnet	9613-1271-02	9613-1271-02	9613-1271-03
▲	21	1 O-ring, EPDM (standard)			
		1 O-ring, NBR			
		1 O-ring, FPM			
	24	1 Bushing	9613-1250-02	9613-1250-02	9613-1250-02
▲	25	1 Lip seal, EPDM (standard)			
		1 Lip seal, NBR			
		1 Lip seal, FPM			
Valve Body					
	22	1 Valve body, lower, 2 ports, clamp	9613-1616-01	9613-1616-03	9613-1616-05
		1 Valve body, lower, 3 ports, clamp	9613-1616-02	9613-1616-04	9613-1616-06
		1 Valve body, lower 2 ports, weld	9613-1395-13	9613-1395-15	9613-1395-17
		1 Valve body, lower 3 ports , weld	9613-1395-14	9613-1395-16	9613-1395-18
Valve Plug					
	36	1 Plug, shut off, complete.....	9613-1558-01	9613-1558-02	9613-1558-03
	36.1	1 Plug, shut off	9613-1473-01	9613-1511-01	9613-1511-02
▲	36.2	1 Plug seal, PTFE			


Recommended spare parts

Service kits					
☐		Service kit, actuator.....	9611-92-6500	9611-92-6500	9611-92-6500
▲		Service kit, EPDM.....	9611-92-6576	9611-92-6561	9611-92-6562
▲		Service kit, HNBR.....	9611-92-6577	9611-92-6566	9611-92-6567
▲		Service kit, FPM	9611-92-6578	9611-92-6571	9611-92-6572

Parts marked with ☐ are included in the service kits (actuator)

Parts marked with ▲ are included in the service kits (product wetted parts)

Tool for bushing (pos. 24) 9613-1609-01

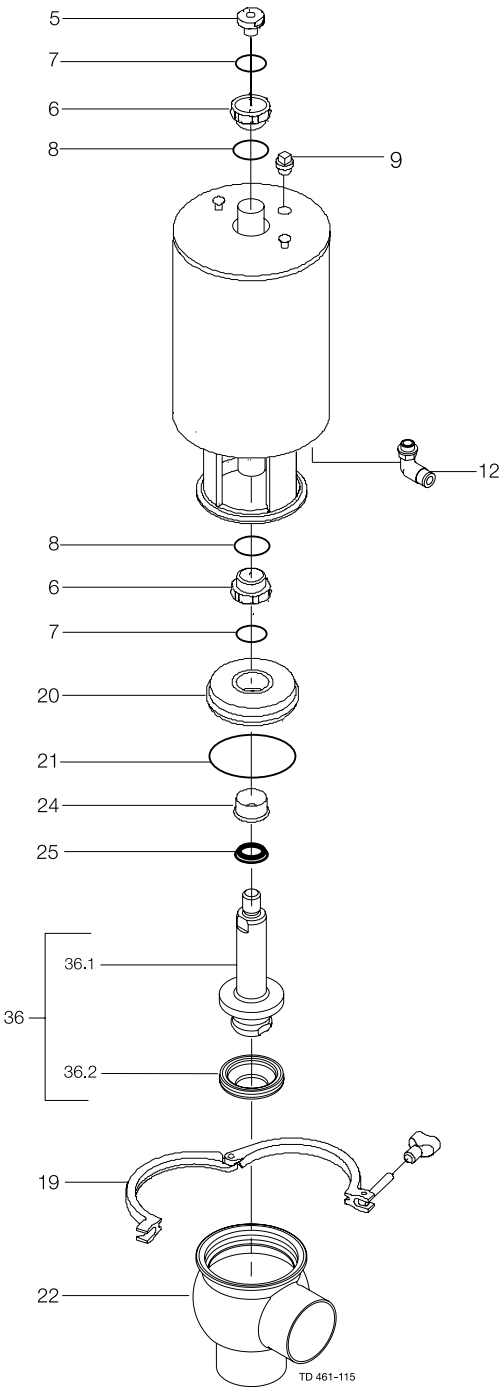

Pos.	Qty	Denomination	2½"	3"	4"
Actuator					
		Actuator, complete (NO)	9613-1548-33	9613-1548-34	9613-1548-35
		Actuator, complete (NC)	9613-1548-38	9613-1548-39	9613-1548-40
		Actuator, complete (A/A).....	9613-1548-43	9613-1548-44	9613-1548-45
	5	Adapter	9613-1274-01	9613-1274-01	9613-1274-01
□	6	Bushing.....			
□	7	O-ring.....			
□	8	O-ring.....			
	9	Plug	9613-4141-01	9613-4141-01	9613-4141-01
	12	Air fitting	9611-99-4682	9611-99-4682	9611-99-4682
Clamp					
	19	Clamp	9612-9393-18	9612-9393-19	9612-9393-20
Bonnet					
	20	Bonnet	9613-1271-04	9613-1271-05	9613-1271-06
▲	21	O-ring, EPDM (standard)			
		O-ring, NBR			
		O-ring, FPM			
	24	Bushing.....	9613-1250-02	9613-1250-02	9613-1250-02
▲	25	Lip seal, EPDM (standard)			
		Lip seal, NBR			
		Lip seal, FPM			
Valve Body					
	22	Valve body, lower, 2 ports, clamp	9613-1616-07	9613-1616-09	9613-1616-11
		Valve body, lower, 3 ports, clamp	9613-1616-08	9613-1616-10	9613-1616-12
		Valve body, lower, 2 ports, weld	9613-1395-19	9613-1395-21	9613-1395-23
		Valve body, lower, 3 ports, weld	9613-1395-20	9613-1395-22	9613-1395-24
Valve Plug					
	36	Plug, shut off, complete.....	9613-1558-04	9613-1558-05	9613-1558-06
	36.1	Plug, shut off,	9613-1511-03	9613-1511-04	9613-1511-05
▲	36.2	Plug seal, PTFE.....			

Recommended spare parts

Service kits					
□		Service kit, actuator.....	9611-92-6500	9611-92-6500	9611-92-6500
▲		Service kit, EPDM.....	9611-92-6563	9611-92-6564	9611-92-6565
▲		Service kit, HNBR.....	9611-92-6568	9611-92-6569	9611-92-6570
▲		Service kit, FPM	9611-92-6573	9611-92-6574	9611-92-6575

Parts marked with □ are included in the service kits (actuator)

Parts marked with ▲ are included in the service kits (product wetted parts)

Tool for bushing (pos. 24) 9613-1609-01