





Spare Parts

Unique PMO-F Mixproof Sanitary Valve

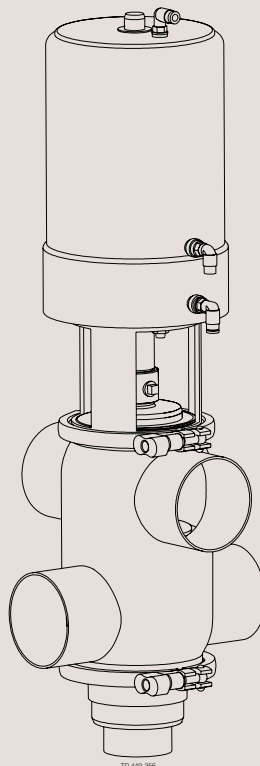

ESE00789ENUS 0901

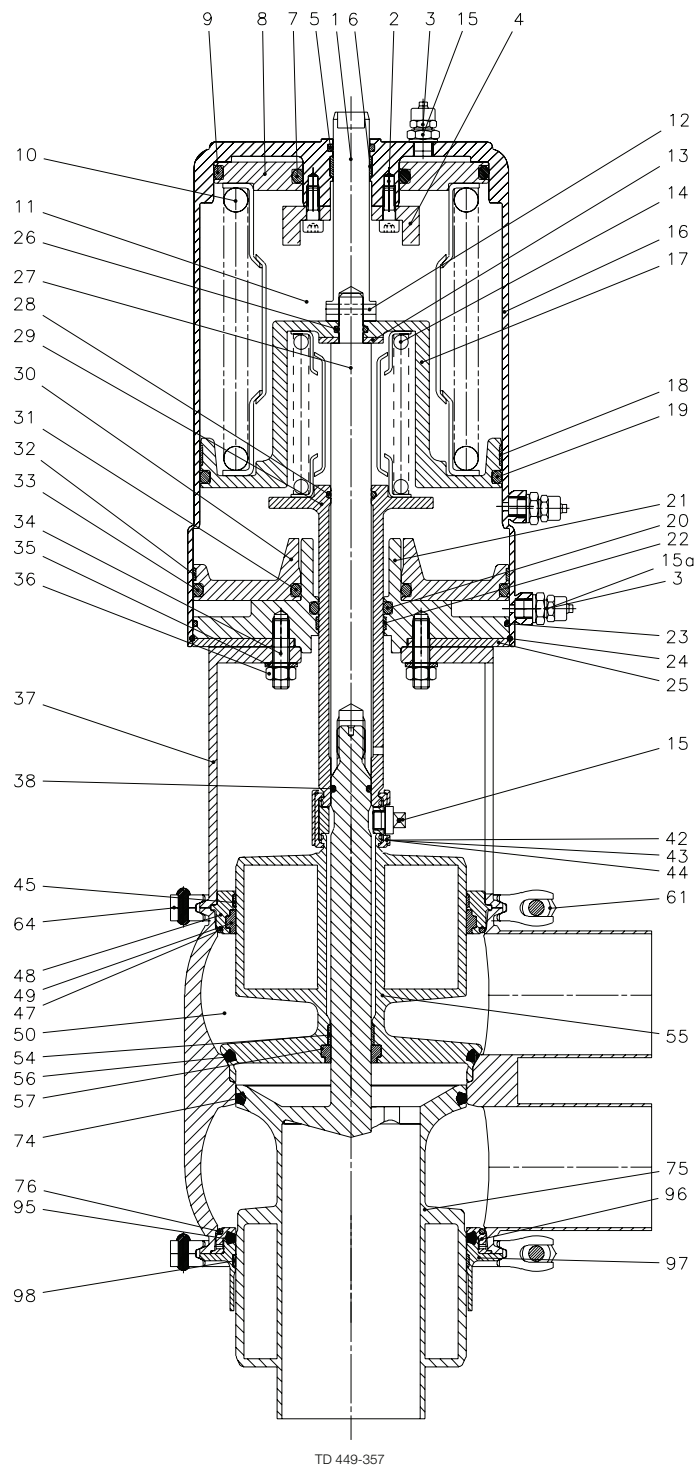


TD 449-357

Wear Parts

Pos.	Qty.	Denomination	PMO 2"	PMO 2½" PMO 3"	PMO 4"
			Seat ø81.3	Seat ø115.3	Seat ø143.9
38	1	O-ring, EPDM.....	9611-99-3555	9611-99-3572	9611-99-3572
47	1	O-ring, NBR (Standard).....	9611-99-3637	9611-99-3641	9611-99-3645
	1	O-ring, EPDM.....	9611-99-3636	9611-99-3640	9611-99-3644
	1	O-ring, HNBR.....	9611-99-3639	9611-99-3643	9611-99-3647
	1	O-ring, FPM.....	9611-99-3638	9611-99-3642	9611-99-3646
49	1	Lip seal, NBR (Standard).....	9613-0085-46	9613-0085-47	9613-0085-37
	1	Lip seal, EPDM.....	9613-0085-26	9613-0085-31	9613-0085-36
	1	Lip seal; HNBR.....	9613-0085-29	9613-0085-34	9613-0085-39
	1	Lip seal, FPM.....	9613-0085-28	9613-0085-33	9613-0085-38
56	1	Seal ring, NBR (Standard).....	9613-0951-15	9613-0951-16	9613-0951-24
	1	Seal ring, EPDM.....	9613-0953-09	9613-0953-12	9613-0953-19
	1	Seal ring, HNBR.....	9613-0953-08	9613-0953-11	9613-0953-18
	1	Seal ring, FPM.....	9613-0951-08	9613-0951-11	9613-0951-22
57	1	Lip seal, NBR (Standard).....	9613-0087-18	9613-0087-18	9613-0087-18
	1	Lip seal, EPDM.....	9613-0087-11	9613-0087-11	9613-0087-11
	1	Lip seal, HNBR.....	9613-0087-14	9613-0087-14	9613-0087-14
	1	Lip seal, FPM.....	9613-0087-13	9613-0087-13	9613-0087-13
74	1	Seal ring, NBR (Standard).....	9613-0952-15	9613-0952-16	9613-0952-24
	1	Seal ring, EPDM.....	9613-0089-09	9613-0089-12	9613-0089-18
	1	Seal ring, HNBR.....	9613-0089-08	9613-0089-11	9613-0089-17
	1	Seal ring, FPM.....	9613-0952-08	9613-0952-11	9613-0952-22
76	1	O-ring, NBR (Standard).....	9611-99-3637	9611-99-3641	9611-99-3645
	1	O-ring, EPDM.....	9611-99-3636	9611-99-3640	9611-99-3644
	1	O-ring, HNBR.....	9611-99-3639	9611-99-3643	9611-99-3647
	1	O-ring, FPM.....	9611-99-3638	9611-99-3642	9611-99-3646
95	1	Special lip seal, NBR (Standard).....	9613-4642-04	9613-4642-08	9613-4642-12
	1	Special lip seal, EPDM.....	9613-4642-03	9613-4642-07	9613-4642-11
	1	Special lip seal, HNBR.....	9613-4642-01	9613-4642-05	9613-4642-09
	1	Special lip seal, FPM.....	9613-4642-02	9613-4642-06	9613-4642-10

Parts

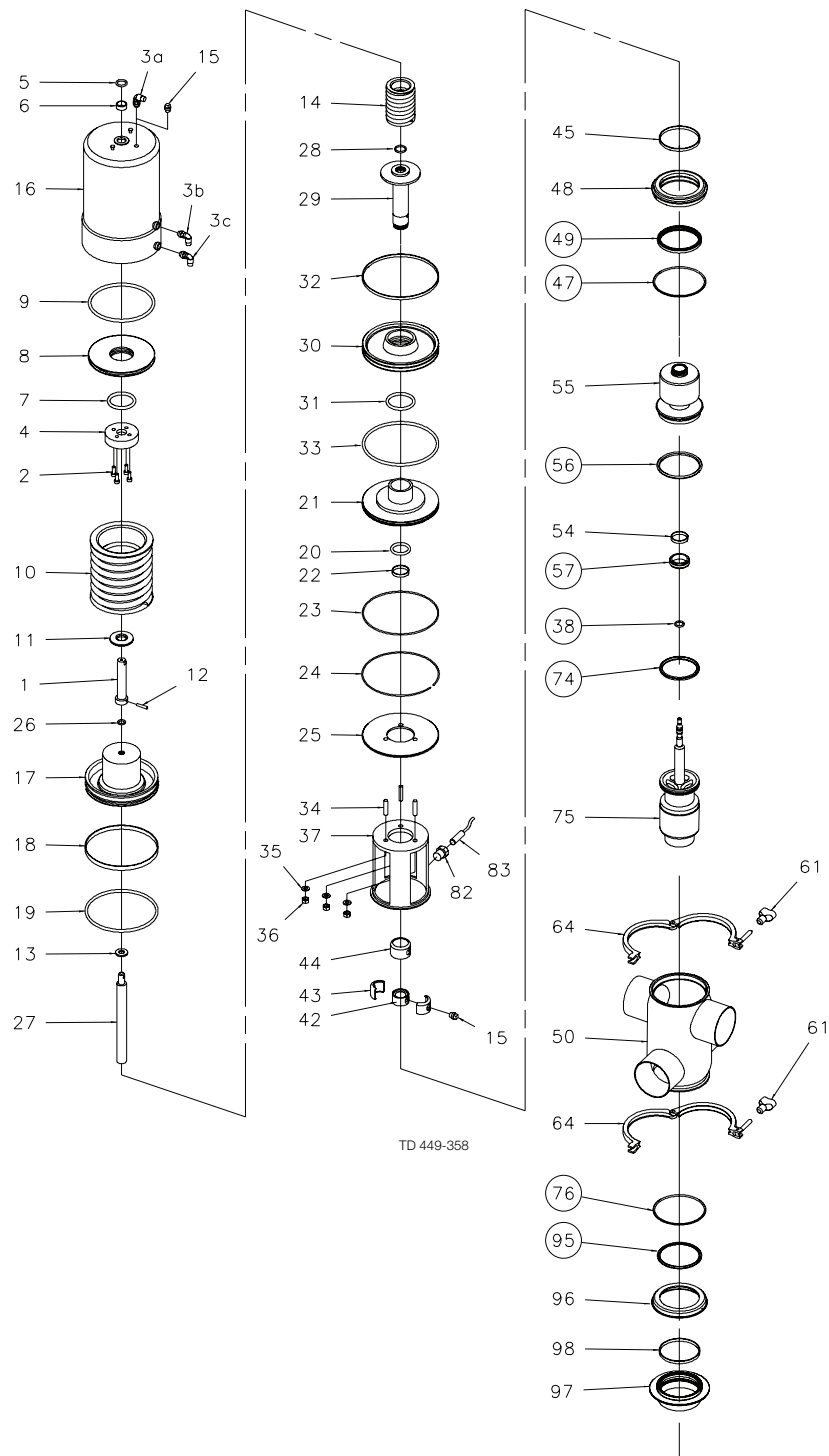

Parts


Pos.	Qty.	Denomination	PMO 2" Seat ø11.3	PMO 2½" Seat ø115.3	PMO 3" Seat ø115.3	PMO 4" Seat ø143.9
	1	Complete actuator.....	9613-0554-44	9613-0555-64	9613-0555-64	9613-0837-45
1	1	Upper stem.....	9613-0101-02	9613-0074-01	9613-0074-01	9613-0074-02
2	4	Screw.....		9611-99-3342	9611-99-3342	9611-99-3342
3	1	Air fitting yellow.....	9611-99-4171	9611-99-4171	9611-99-4171	9611-99-4171
	1	Air fitting blue.....	9611-99-3780	9611-99-3780	9611-99-3780	9611-99-3780
	1	Air fitting red.....	9611-99-4172	9611-99-4172	9611-99-4172	9611-99-4172
4	1	Stop for upper piston.....		9613-0053-01	9613-0053-01	9613-0053-02
5	1	O-ring, NBR.....	9611-99-3499	9611-99-3499	9611-99-3499	9611-99-3499
6	1	Guide ring, Turcite.....	9613-0084-08	9613-0084-08	9613-0084-08	9613-0084-08
7	1	O-ring, NBR.....		9611-99-3514	9611-99-3514	9611-99-3514
8	1	Upper piston.....		9613-0056-01	9613-0056-01	9613-0056-02
9	1	O-ring, NBR.....		9611-99-3512	9611-99-3512	9611-99-3513
10	1	Spring assembly.....	9613-0125-01	9613-0075-01	9613-0075-01	9613-0256-03
11	1	Distance spacer.....	9613-0102-02			
12	1	Pin.....	9611-99-4197	9611-99-4198	9611-99-4198	9611-99-4199
13	1	Washer.....	9611-99-3594	9611-99-3595	9611-99-3595	9611-99-3596
14	1	Spring assembly.....	9613-0131-02	9613-0095-02	9613-0095-02	9613-0095-02
15	1	Plug.....	9613-4141-01	9613-4141-01	9613-4141-01	9613-4141-01
16	1	Cylinder (3A marking).....	9613-0126-06	9613-0051-06	9613-0051-06	9613-0150-11
17	1	Main piston.....	9613-0132-01	9613-0057-01	9613-0057-01	9613-0159-01
18	1	Guide ring, Turcite.....	9613-0084-09	9613-0084-10	9613-0084-10	9613-0084-11
19	1	O-ring, NBR.....	9611-99-3505	9611-99-3507	9611-99-3507	9611-99-3509
20	1	O-ring, NBR.....	9611-99-3503	9611-99-3607	9611-99-3607	9611-99-3607
21	1	Bottom.....	9613-0140-01	9613-0054-01	9613-0054-01	9613-0168-01
22	1	Guide ring, Turcite.....	9613-0084-03	9613-0084-04	9613-0084-04	9613-0084-04
23	1	O-ring, NBR.....	9611-99-2228	9611-99-1489	9611-99-1489	22340675
24	1	Retaining ring.....	9613-0248-02	9613-0248-03	9613-0248-03	9613-0248-04
25	1	Cover disk.....	9613-0058-02	9613-0058-03	9613-0058-03	9613-0058-04
26	1	O-ring, NBR.....	9611-99-3528	9611-99-3495	9611-99-3495	9611-99-3530
27	1	Inner stem.....	9613-0106-03	9613-0073-03	9613-0073-03	9613-0073-02
28	1	O-ring.....	9611-99-3495	9611-99-0030	9611-99-0030	9611-99-0030
29	1	Piston rod.....	9613-0134-02	9613-0060-02	9613-0060-02	9613-0060-02
30	1	Lower piston.....	9613-0138-01	9613-0055-01	9613-0055-01	9613-0166-01
31	1	O-ring, NBR.....	42153	42153	42153	42153
32	1	Guide ring, Turcite.....	9613-0084-05	9613-0084-06	9613-0084-06	9613-0084-07
33	1	O-ring, NBR.....	22341275	9611-99-3508	9611-99-3508	9611-99-3510
34	3	Bolt.....	9611-99-3618	9611-99-3618	9611-99-3618	9611-99-3618
35	3	Washer.....	9611-99-3594	9611-99-3594	9611-99-3594	9611-99-3594
36	3	Nut.....	9611-99-0360	9611-99-0360	9611-99-0360	9611-99-0360
42	1	Spindle liner.....	9613-0335-01	9613-0090-01	9613-0090-01	9613-0090-01
43	2	Clamp.....	9613-0336-01	9613-0092-01	9613-0092-01	9613-0092-01
44	1	Lock.....	9613-0091-02	9613-0091-01	9613-0091-01	9613-0091-01
45	1	Guide ring, PTFE.....	9613-0084-14	9613-0084-15	9613-0084-15	9613-0084-21
48	1	Upper sealing element.....	9613-0064-04	9613-0188-04	9613-0188-04	9613-0713-01
54	1	Guide ring, PTFE.....	9613-0084-02	9613-0084-02	9613-0084-02	9613-0084-02
55	1	Upper plug.....	9613-0701-01	9613-0702-01	9613-0702-03	9613-0704-01
61	2	Wingnut.....	9612-5580-01	9612-5580-01	9612-5580-01	9612-5580-01
64	2	Clamp without nut.....	9613-0216-01	9613-0217-01	9613-0217-01	9613-0218-01
75	1	Lower plug.....	9613-4658-01	9613-4658-02	9613-4658-03	9613-4658-04
82	1	Bolt for indication.....	9613-0926-02	9613-0926-01	9613-0926-01	9613-0926-01
83	1	Sensor for indication.....	9611-99-4541	9611-99-4541	9611-99-4541	9611-99-4541
84	1	Plate for sensor for indication.....	9613-0957-01	9613-0957-01	9613-0957-01	9613-0957-01
96	1	Lower sealing element, upper part.....	9613-4652-01	9613-4654-01	9613-4654-01	9613-4656-01
97	1	Lower sealing element, lower part.....	9613-4653-01	9613-4655-01	9613-4655-01	9613-4657-01
98	1	Guide ring, Turcite.....	9613-4661-01	9613-4661-02	9613-4661-02	9613-4661-03

Parts


Pos.	Qty.	Denomination	PMO 2" Seat ø81.3	PMO 2½" Seat ø115.3	PMO 3" Seat ø115.3	PMO 4" Seat ø143.9
37	1	Intermediate piece.....	9613-0191-21	9613-0192-15	9613-0192-13	9613-0193-17
50	1	Valve body 11-00.....	9613-0709-01	9613-0710-01	9613-0711-01	9613-0712-01
	1	Valve body 12-00.....	9613-0709-05	9613-0710-05	9613-0711-05	9613-0712-05
	1	Valve body 21-00.....	9613-0709-07	9613-0710-07	9613-0711-07	9613-0712-07
	1	Valve body 22-00.....	9613-0709-09	9613-0710-09	9613-0711-09	9613-0712-09
	1	Valve body 11-90.....	9613-0709-02	9613-0710-02	9613-0711-02	9613-0712-02
	1	Valve body 12-90.....	9613-0709-06	9613-0710-06	9613-0711-06	9613-0712-06
	1	Valve body 21-90.....	9613-0709-08	9613-0710-08	9613-0711-08	9613-0712-08
	1	Valve body 22-90.....	9613-0709-10	9613-0710-10	9613-0711-10	9613-0712-10
	1	Valve body 11-180.....	9613-0709-03	9613-0710-03	9613-0711-03	9613-0712-03
	1	Valve body 11-270.....	9613-0709-04	9613-0710-04	9613-0711-04	9613-0712-04

900-548


TYPE 11-00

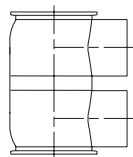


TYPE 11-90

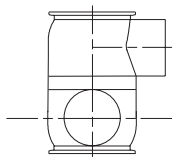


TYPE 11-180

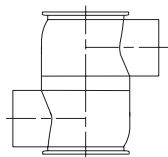


TYPE 11-270

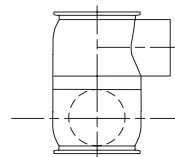


TYPE 12-00

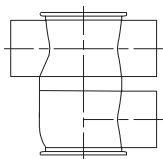


TYPE 12-90

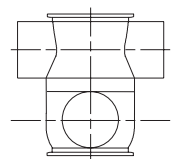


TYPE 21-00

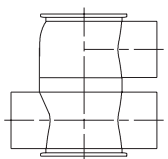


TYPE 21-90

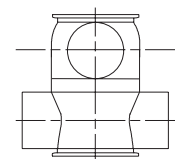

TYPE 22-00

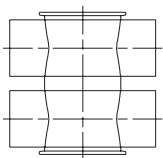


TYPE 22-90

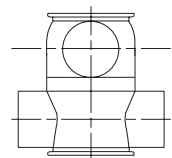

TD 449-014J

Service kits for Product Wetted Parts


Denomination		
PMO 2"		
Service kit, NBR.....	9611-92-6830	
Service kit, EPDM.....	9611-92-6827	
Service kit, HNBR.....	9611-92-6836	
Service kit, FPM.....	9611-92-6833	
PMO 2.5"+3"		
Service kit, NBR.....	9611-92-6831	
Service kit, EPDM.....	9611-92-6828	
Service kit, HNBR.....	9611-92-6837	
Service kit, FPM.....	9611-92-6834	
PMO 4"		
Service kit, NBR.....	9611-92-6832	
Service kit, EPDM.....	9611-92-6829	
Service kit, HNBR.....	9611-92-6838	
Service kit, FPM.....	9611-92-6835	

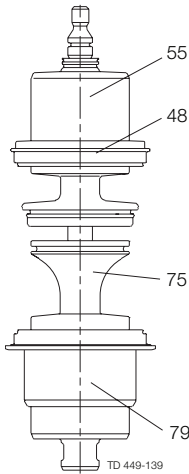

(Plug set-up 12)

900-548

Rebuilding Set PMO-F to PMO Plus CP

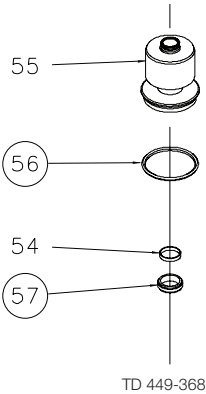


Rebuilding Set PMO-F to PMO Plus CP

	PMO 2" Seat ø81.3	PMO 2½" Seat ø115.3	PMO 3" Seat ø115.3	PMO 4" Seat ø143.9
Upper plug, cpl., NBR.....	9613-4662-01	9613-4662-02	9613-4662-03	9613-4662-04
Upper plug, cpl., EPDM.....	9613-4662-05	9613-4662-06	9613-4662-07	9613-4662-08
Upper plug, cpl., HNBR.....	9613-4662-09	9613-4662-10	9613-4662-11	9613-4662-12
Upper plug, cpl., FPM.....	9613-4662-13	9613-4662-14	9613-4662-15	9613-4662-16

Pos.	Qty.	Denomination
54	1	Guide ring, PTFE
55	1	Upper plug
56	1	Seal ring
57	1	Lip seal
99	1	Label

Axial Installation Tool

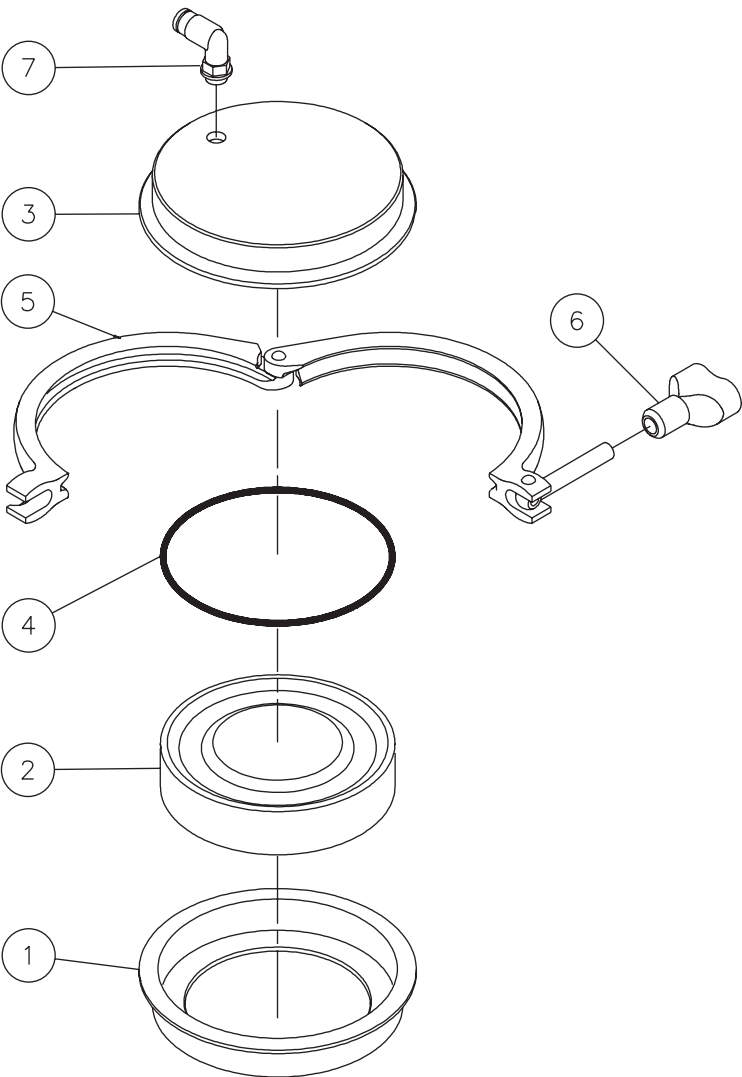


TD 449-038

Axial Installation Tool

			Seat ø81.3	Seat ø115.3	Seat ø143.9
Pos.	Qty.	Denomination	9613-0505-02	9613-0505-03	9613-0505-07
1	1	Lower part.....			
2	1	Piston.....			
3	1	Upper part.....			
4	1	O-ring, NBR.....	9611-99-3703	9611-99-3349	9611-99-4113
5	1	Clamp.....			
6	1	Wingnut.....			
7	1	Air fitting.....			

TD900198

Radial Installation Tool

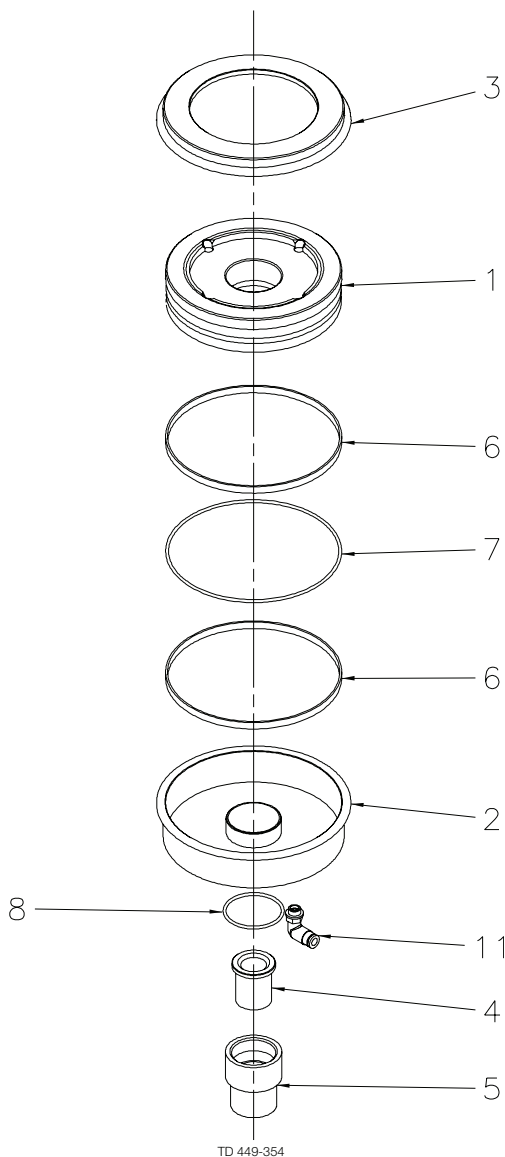

Radial Installation Tool

			PMO 2"	PMO 2.5" PMO 3"	PMO 4"
			Seat ø81.3	Seat ø115.3	Seat ø143.9
Pos.	Qty.	Denomination	9613-4260-02	9613-4260-04	9613-4260-09
1	1	Piston.....			
2	1	Lower part.....			
3	1	Upper part.....			
4	1	Bushing.....			
5	1	Guide.....			
6	2	Guide ring.....	9613-0084-22	9613-0084-22	9613-0084-23
7	1	O-ring, NBR.....	9611-99-3349	9611-99-3349	9611-99-4113
8	1	O-ring, NBR.....	9611-99-3705	9611-99-3705	9611-99-3705
9	1	Clamp.....			
10	1	Wingnut.....			
11	1	Air fitting.....			

How to contact Alfa Laval

Contact details for all countries are continually updated on our website.

Please visit www.alfalaval.com to access the information direct.