



www.rodem.com 800-543-7312

Installation and Startup Guide

Model IZMAG Integral Electromagnetic Flowmeter

Version 1.6 Document 1175



Anderson Instrument Co., Inc.

156 Auriesville Rd. ~ Fultonville, NY 12072

Phone: 518-922-5315 ~ Fax: 518-922-8997

www.anderson-negele.com

This product carries a one (1) year warranty against manufacturers defects. A complete warranty statement is available by contacting Anderson, or on our website.

PRODUCT DESCRIPTION

The Anderson IZMAG Flowmeter is a precision instrument that is integrated directly in to a process line, and provides real-time information about the process. The principle of operation is based on the measurement of a voltage which is the result of a conductive fluid passing through an electromagnetic field. The resulting information that the IZMAG generates can be used to provide an instantaneous indication of the flow rate of a liquid or collected over time to indicate a total of what has passed through the pipe.

Using the above operating principles, the IZMAG can accurately provide outputs for control or indication of the flow process.

SPECIFICATIONS

Performance

Accuracy: ± .20% * of rate

Size	Operational Flow	Range
	gal/min	ltr/min
10	0.14 - 14	0.53 - 53
15	0.3 - 30	1.13 - 113
25	0.8 - 80	3.0 - 300
32	1.3 - 130	5.0 - 500
50	3 - 300	11.7 - 1166
65	5.2 - 525	20 - 2000
80	8 - 800	30 - 3000
100	12 - 1200	46 - 4667

^{* ± 1} mm/sec

Operating / Environmental

Temperature Limits: 32-212°F (0-100°C) Process

32-265°F (0-165°C)

for 30 min. CIP

Ambient Temperature DC -12 – 130°F(-25-55°C)

AC -12 = 130°F(-25-55°C) Display:

Pressure Rating: 1.4-145 psi abs.

.1 – 11 bar abs.

Product Requirements: 5 µS min. conductivity

Approvals: ETL, CE(excluding ethernet), 3-A

Materials / Construction

Product Contact Surfaces: PFA 316L SS, EPDM

Housing: 304 SS Enclosure Rating: IP 67

Process Connection Type: Tri-clamp®, Cherry I-line

Electrical / Power / Signal

Signal Output:

Control Input:

Connections:

conduit adapters

Power Requirement: 9-32 VDC 7W/V.A.

100-240 VAC 50-60hz -15% / + 10% 7W/V.A. (2) digital pulse output 24VDC @20 mA (1) digital status output

(1) digital status output 24VDC @20 mA

(1) 4-20mA passive/active

Optional 2nd 4-20mA w/Hart (passive)

(1) 9-32 VDC R<3.2kohms

(3) M16 ports with cord grips and ½"

Graphic LCD

46 X23mm illuminated

Communications: Hart, CS3 BUS

Optional - HART & Ethernet

UNPACKING


Product Check:

Upon receipt, carefully inspect the product for damage to connectors and sensor face. Damage claims should be made directly with carrier.


Major items are:

- IZMAG configuration record sheet
- meter body
- cord grips
- manual


IZMAG INSTALLATION

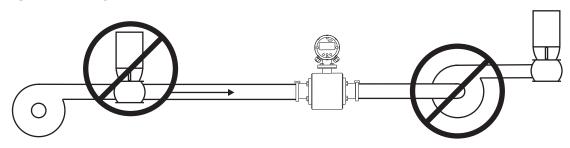

Warning: Before welding on a pipline with a flowmeter installed, unplug the flowtube cable from the meter

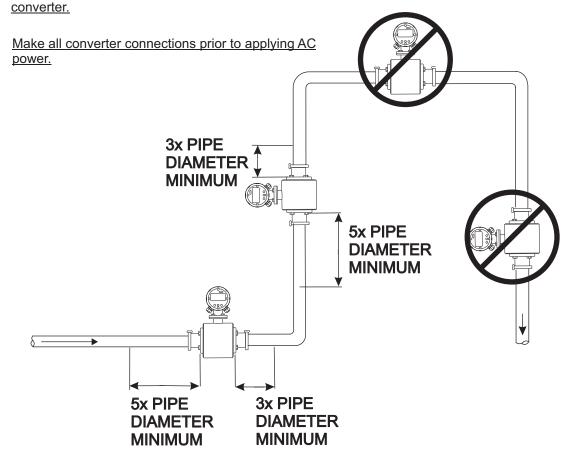

- Install meter body in-line with arrow decal matching direction of flow.
- Install in process line with orientation to ensure flow tube remains full.
- Avoid installing the meter body where vacuum conditions exist due to potential resultant inaccuracies.
- Pipeline must be properly grounded, or earth ground can be landed to the flow tube lug.
- Avoid installing the meter body next to equipment emitting strong electromagnetic fields that could distort the magnetic field generated by the flowmeter and cause measuring errors.

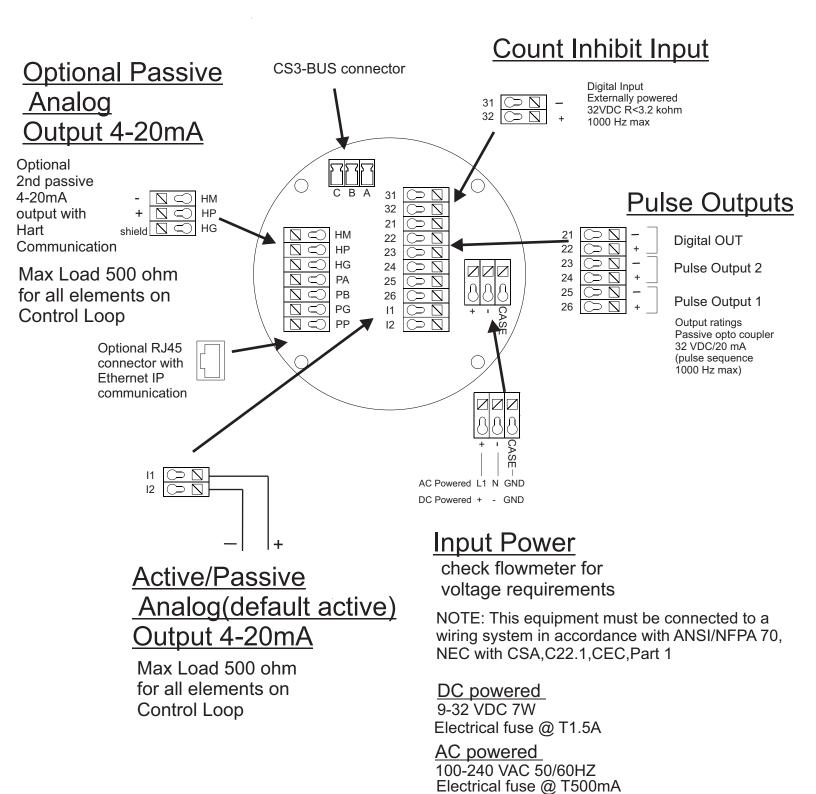

DISPLAY ORIENTATION

Included with each IZMAG is a 3mm hex key wrench meant to simplify the rotation of the flow meter's display. **Turn off power to the meter before attempting.** To change the orientation of the display for vertical piping installations, remove the two silver socket head screws that are located on either side of the display, rotate 90 degrees and replace the screws in the holes above and below the display. Tighten with modest torque.

CALIBRATION

Hydraulic Zero Adjustment


With the initial start-up of the flow meter it is recommended to carry out a zero adjustment ("ZERO adjust") for the flow meter to be optimized in its new environment. However for most applications a zero adjustment is not required.

ATTENTION! It is important to confirm the following conditions before performing a zero procedure:


- -The device has to reach its working temperature, i.e. it should have been switched on at least 5 minutes.
- -The transmitter has to be completely filled with the typical liquid free of air.
- -No flow is allowed to occur during the entire "ZERO adjust" measurement.

To begin we start at the "total display" and using the AAAAAA key we will activate it 6 times to reach the "Special

Functions" display. Then use the Key once to move to the "zero adjust" screen.









The "ZERO adjust" measurement is activated if the ELL key is depressed for a period of 1.5 seconds. To perform the "ZERO adjust"

it will be necessary to enter Enable code "222". To start enter a "2" using the 👭 tey, then move the cursor to the left using initiate "ZERO adjust".

The top line of the display shows the current ZERO value. The course of the bargraph shows the progress of the measurement. The measurement is finished when the bargraph is completely filled. The new ZERO value is displayed below the bargraph and then installed.


Output Simulation


To use the similation function of the IZMAG it will be necessary to enter Enable code "333". After selecting the type of simulation the screen will prompt entry of the Enable code.

Analog Output Simulation

Beginning at the total screen, activate the **Markey seven times so that the "Service Level" screen is







Through the use of the *** key the output can be set to three different settings. First 20mA will be output, activating the key again will set 12mA and one more activation will output 4mA. Leaving this screen will terminate the output simulation.

Pulse Output Simulation

Following the above instructions to the current output screen, the pulse output simulation is displayed by activating the by kev once.






Activating the ** key will begin the simulation. In the case of the pulse output a progress bar will display the duration of the test when complete (1 min.) A fixed amount of pulses will have been output by the meter. As with the current display this will be terminated if the screen is changed.

Simulation of the flow rate

Following the above instructions to the pulse output output screen, the flow rate simulation is displayed by activating the key once.







This function allows for continuous simulation of both the pulse and primary analog outputs. Using this simulation can be helpful in "dry testing" a system prior to actual use. To begin the activate the ++ key to start, the flow will read 0 gal/min. With each activation of the ++ key the flow rate will increase by 10% of Qmax. The function will be terminated by keying one additional time past the max rate.

You may be prompted to first input an unlock code.